


#### **TOP AND CABINET PARTS**

For Model: LSR5101LQ1 (Designer White)

Illus. No.	Part No.	DESCRIPTION
1	LIT3956025 LIT3955901 LIT3955869 LIT3956327 LIT3955771	Literature Parts Installation Instructions Feature Sheet Use & Care Guide Energy Guide Wiring Diagram
	owing May	/ Be Purchased
	EPAIR MA	
	LIT4313896	Manual, Washer
2 3	8274315 62750	Top Spacer, Cabinet To Top (4)
4 5 6	357213 63424 62780	Nut, Push-In (2)
7 8	3357011 3356311	Screw, 10–16 x 1/2 Screw & Washer, Lid Switch (2)
11 13	3949237 3351355	Switch, Lid Screw, Lid Hinge Mounting (4)
15 16 17 18	54584 91770 19119 21258	Hinge, Lid (L.H.) Hinge, Lid (R.H.) Bumper, Lid Hinge Bearing, Lid
19 20 22 28	3361411 358684 9724509 3390631	Strike, Lid Switch Bumper, Lid (2) Screw,
31	90016	10–16 X 3/8 (5) Clip, Harness

### CONTROLS AND REAR PANEL PARTS For Model: LSR5101LQ1

(Designer White)

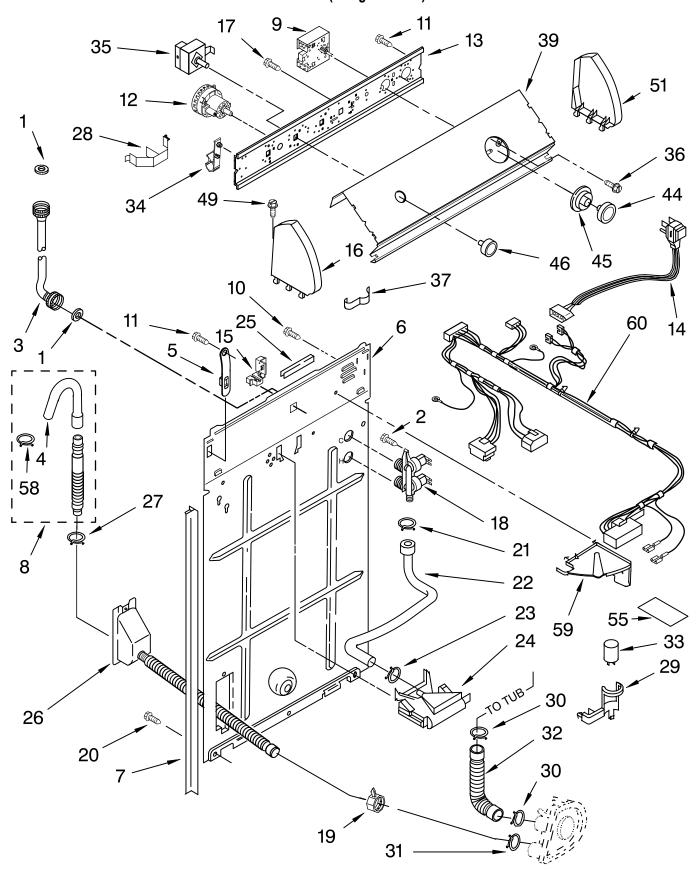

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


### CONTROLS AND REAR PANEL PARTS For Model: LSR5101LQ1

For Model: LSR5101LQ1 (Designer White)

Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	3976300	Washer, Water Inlet Hose (4)	10 11		Screw, Ground Screw, 8–18 x 3/8	28	8055003	Clip, Harness & Pressure Hose
		(1–1/16 x 5/8)	12		Switch, Water Level	29	8318201	Clip, Capacitor
2	9740848		13		Bracket, Control	30	3363366	Clamp, Hose
2 3		Hose, Water	14	661661	<b>,</b>	31		Clamp, Hose
	3949374	Inlet (2) Blue Coupler	15	3952821	(Includes Item 15) Strain Relief,	32	3951449	Hose, Pump To Tub (Includes #30)
		Red Coupler	'`	0002021	Power Cord	33	661606	
4		Nozzle-Drain	16	8271365	Cap, End (L.H.)			Motor Start
		Hose	17		Screw, Ground	34		Retainer, Harness
5	8318255	Strap, Console (2)	18	3952164	Valve, Water	35		Switch, Rotary
6		Panel, Rear			Mixing	36	3400818	Screw, Timer
7	62747	Pad, Rear Panel	19		Clamp, Hose			Mounting
8		Hose, Drain	20		Screw, 10-16 x 3/8	37	3347812	
		(4 ft.)	21		Clamp, Hose	39		Panel, Console
	661577	Hose, Drain	22	8317974	Hose, Vacuum	44		Knob, Timer
		(9 ft.)			Break	45		Dial, Timer
		(Not Included)	23		Clamp, Hose	46		Knob, Control
	3357090	Extension,	24		Break, Vacuum	49	388326	Screw, Console
		Drain Hose	25		Edge Protector			(Panel to Top)
		(21 Inches.)	26	8317940	Drain Hose	51		Cap, End (R.H.)
		(Not Included.)			Assembly	55		Shield, Capacitor
9	3951166	Timer, Control (60 Hz.)	27	3366912	Clamp, Hose	58	3366913	Clamp, Drain Hose
		(Motor Not A				59	8539874	Shield, Suds
		Service Part)				60		Harness, Wiring (For Detail See Page 9 & 10)

## AGITATOR, BASKET AND TUB PARTS For Model: LSR5101LQ1

(Designer White)

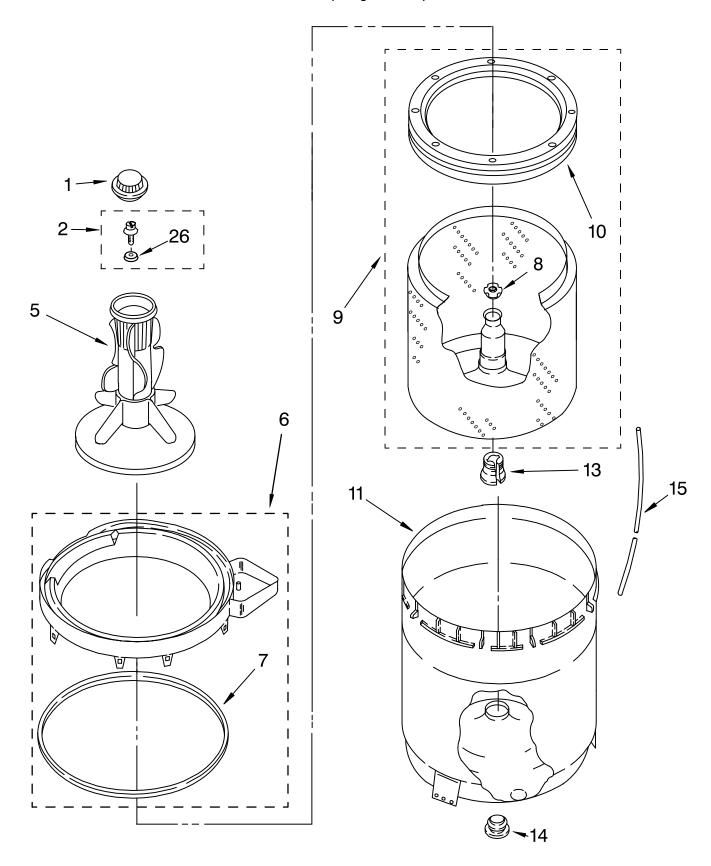

# AGITATOR, BASKET AND TUB PARTS For Model: LSR5101LQ1

Model: LSR5101LQ1 (Designer White)

Illus. No.	Part No.	DESCRIPTION
1	3355758	Can Agitatar
-		Cap, Agitator
2	358237	Screw & Washer
5	3350151	Agitator
6	8528150	Tub Ring & Gasket
7	3976308	Gasket, Tub Ring
8	21366	Nut, Spanner
9	8526017	Basket & Balance
		Ring
10	8519788	Balance Ring
11	63849	Tub
13	389140	Block, Drive
14	383727	Gasket, Centerpost
15	3347780	Hose, Pressure
		Switch
26	3949550	Washer

# BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS For Model: LSR5101LQ1


(Designer White)

5		(!	Designer White)			
<b>©</b>	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
	1	388952	Brake & Drive Tube (Complete)	10	3357334	Screw, Gearcase To Base (3)
			(Refer to Page 11 For Further	11	62611	Plate, Motor Mount To Gearcase
1	2	63292	Breakdown) Washer, Spin Tube Thrust	12 13	62691 285753	Grommet, Motor (4) Coupling, Motor
2	3	62697	Ring, Spin Tube Support	14		And Isolation Shield, Motor
3	4 5	3951311	Ring, Retainer Clutch (Complete)	15	3355454	Clip, Anti–Rattle
4	6	3951308	Band & Lining, Clutch (Includes	16 17	3400516 3349637	Retainer, Motor (2)
5	7	62646	Illus. 7 & 8) Cap, Clutch	18		Shield, Tub To Motor
	8 9	3946792	Spring (2) Spring, Clutch Gearcase	19 20		Motor, Main Drive Switch, Main
	9	3300030	(Complete) (Refer To Page	21		Drive Motor Retainer, Pump (2)
16			12 For Further Breakdown)	22 23		Pump (Complete)
				1		10–16 x 5/8
9 10 11/12 13 14					23	21
				· · · · · · · · · · · · · · · · · · ·	7 6	22 21
			23			<b>₩</b> .

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


#### **MACHINE BASE PARTS**

For Model: LSR5101LQ1

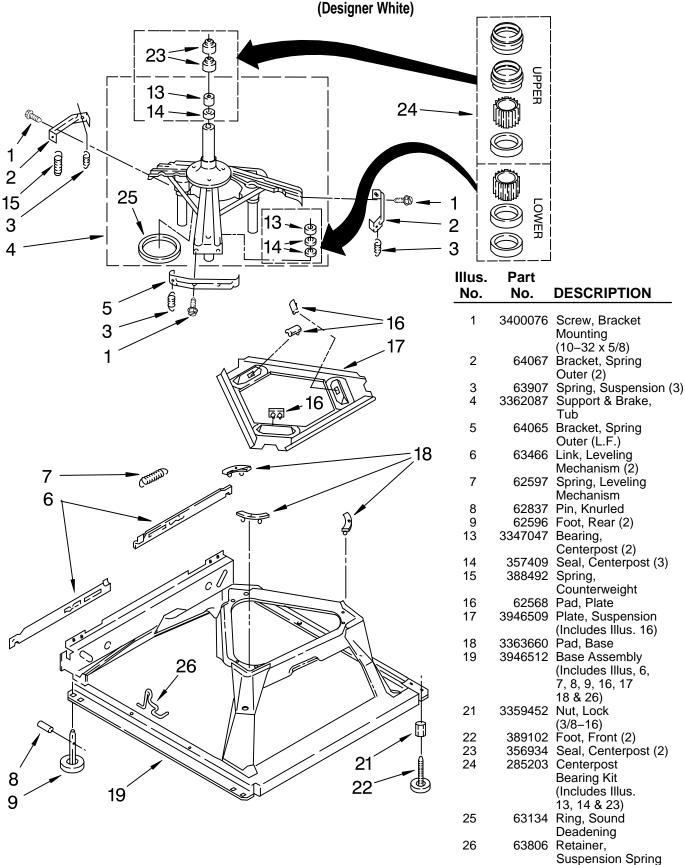

### WIRING HARNESS PARTS For Model: LSR5101LQ1

(Designer White)

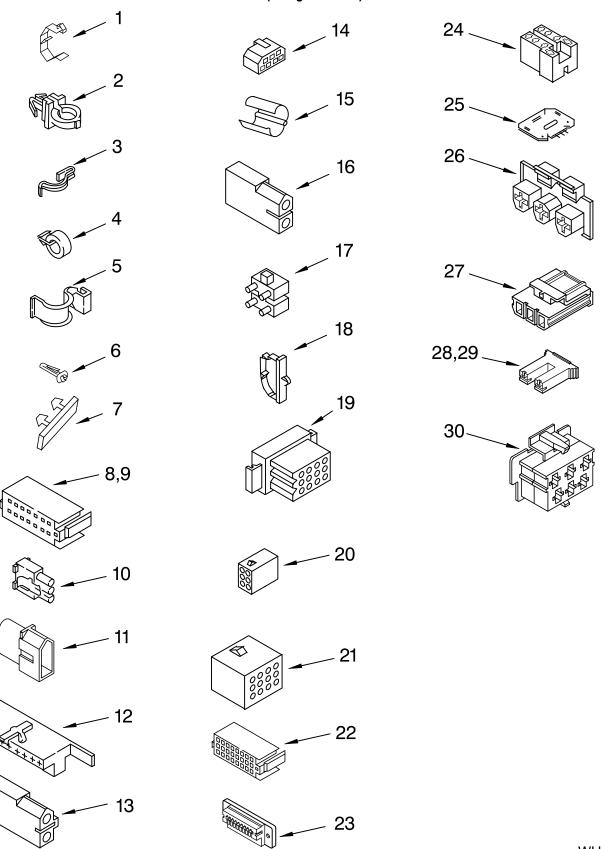

WH2G

### WIRING HARNESS PARTS For Model: LSR5101LQ1

Or Model: LSR5101LQ1 (Designer White)


Illus.	Part		lllus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
						-		
1	3349557	Clip, Harness	13	3348075	Block, Disconnect	23	3349494	Connector, Etc
2		Clip, Harness			(Motor 3 Speed)	24	60687	Connector, Relay
3		Clip, Harness			(Use Term. 94613			(Use Term.308569)
4	3352501	Clip, Harness			Or 94614.)	25	3407125	E.T.C. Control
5		Clip, Harness	14	3347243	Block, Disconnect	26	3948617	Connector (T.P.A.)
6	3390496	Clip, Harness			(Use Term. 352088)			(3–Circuit)
7	389379	Retainer,	15	63523	Protector			(Lid Switch)
		(Suds Models)	16	717252	Connector			(Use Term. 3948619
8	352090	Timer, Block			(2-Way)			OR 3948620.)
		Disconnect			(Use Term.94614)	27	3360056	Connector (T.P.A)
		(White)	17	387566	Plug, Terminal			(3-Circuit)
9	352089	Timer, Block			(4-Way)			(Pressure Switch)
		Disconnect			(Power Cord)			(Use Term.3948619
		(Black)			(Use M3 Screws)			OR 3948620.)
10	62889	Receptacle,	18		Clip, Harness	28	3354925	Block, Connector
		Terminal	19	3390423	Block, Disconnect			(Cold Valve)
		(3–Way)			(12-Way)			(Use Term.693217)
		(Lid Switch)			(Timer)	29	3354926	Block, Connector
		(Use Term.94613)			(Use Term. 94613)			(Hot Valve)
		Or 94614.)	20	3347730	Receptacle			(Use Term.693217)
11	353424	Plug, Terminal			(6-Way)	30	3948615	Connector (T.P.A.)
		(3–Way)	l		(Use Term. 94613)			(6-Circuit)
		(Power Cord)	21	388818	Plug, Terminal			(Temp. Switch)
		(Use Term.94613)			(12-Way)			(Use Term.3948619
12	62505	Block, Disconnect			(Use Term. 94613			OR 3948620.)
		(Motor 2 Speed)			Or 94614.)			
		(Use Term.352088)	22	3369366	Timer, Block			
					Disconnect			
					(Black) (Amp)			
					(Use Term.3369365)			

# FOR COMPLETE WIRING HARNESS REFER TO CONTROL AND REAR PANEL PARTS PAGE

WH2G

#### **BRAKE AND DRIVE TUBE PARTS**

For Model: LSR5101LQ1 (Designer White)

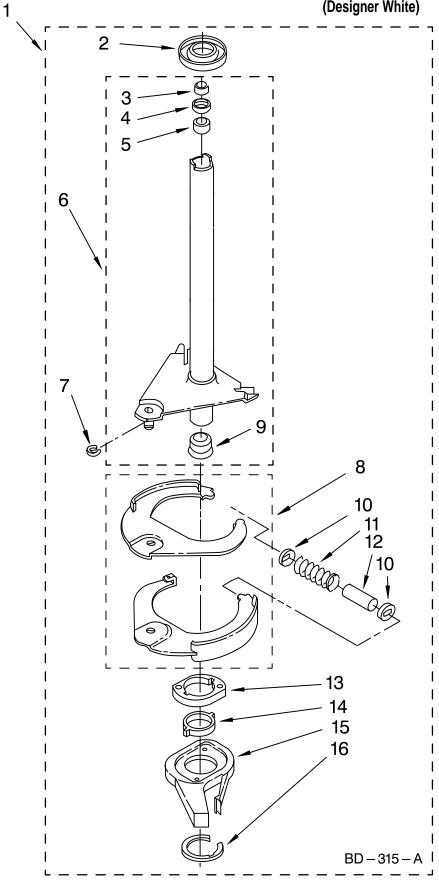

Illus. No.	Part No.	DESCRIPTION			
1	388952	Brake And Drive Tube (Complete)			
2	62658	Ring, Thrust			
2 3 4	91939	Seal, Oil			
4	356427	Seal, Drive Tube			
5	356937	Spacer, Drive			
		Tube			
6	64027	Tube, Basket			
		Drive (Includes			
_		Illus. 3, 4, 5 & 9)			
7	64035	Ring, Retaining			
8	64232	Shoe, Brake			
9	62703	"T" Bearing,			
40	00040	Spin Tube			
10	62648	Cap, Brake Spring (2)			
11	387806	Spring (2) Spring, Brake			
12	62909	Sleeve, Brake			
12	02000	Spring			
13	63023	Cam, Brake			
		Release			
14	63022	Sleeve, Cam			
15	64194	Driver, Brake			
		Cam			
16	90368	Ring, Retaining			
	FOLLOV	VING PARTS			
	NOT ILLUSTRATED				

285208 Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


#### **GEARCASE PARTS**


For Model: LSR5101LQ1
(Designer White)

	(Designer White)			
r - <u> </u>	- <u></u>	_	1	
	<u> </u>		•	
	22			
12		Illus.	Part	
		No.	No.	DESCRIPTION
3		110.	INU.	DESCRIPTION
		1	3360630	Gearcase
				(Complete)
	_ 23	2	285202	Cover, Gearcase
		3	3349985	Seal, Gearcase
' '	7 24	4	285195	Cover Sealer, Gasket
I IIIIII	24	4	200190	(.20 Fl. Oz.) (6 ml)
		5	63320	Pinion, Spin
ı ¦ 8 — <b>-</b> 學	25	Ü	00020	(Includes Illus. 25)
		6	356427	Seal, Spin
¦	26			Pinion
10		7	389387	Shaft, Agitator
1 10		•		(Complete)
9		8	90369	Ring, Retaining (2)
		9 10	62677 62676	Retainer, Spring Spring, Agitate
11 11		11	63273	Gear, Agitate
' ' <b>-</b>		11	03273	(Includes 15 and 29)
1 12		12	62619	Washer, Agitate
1 10				Gear
13		13	62580	Cam Follower
14				(Includes 14)
		14	62581	Cam, Agitate
<u> </u>		15	205500	(Includes 13)
الله ;		15	285509	Shaft, Agitator (Includes 11 and 29)
		16	62618	Washer, Cam Thrust
		17	16018	Bearing, Thrust
1		18	85529	Ball, Bearing
i l		19	389230	Bottom and Pinion,
i i 15 . I i	07			Gearcase
	27	21	285352	Seal, Thrust Plug
		22	3351614	Screw, Gearcase
				Cover, Mounting (8) (10–24 x 3/8)
ı 16 Ü	9 28 1	23	3362552	Ring, Retaining
		24	285735	Washer Kit,
29 _ 🖜				Thrust
8		25	62570	Gear, Spin
		26	388253	Neutral Assembly
117 <del></del>		27	3349296	Rack, Connecting
		28	62621	Actuator, Shift
18		29	388815	Washer,
				Intermediate
0 0	men			
	L / 1			
1 101				
21				
191				
	4			
l	¹ GC−215−C <sup> </sup>			
L				

### WATER SYSTEM PARTS For Model: LSR5101LQ1

For Model: LSR5101LQ1 (Designer White)

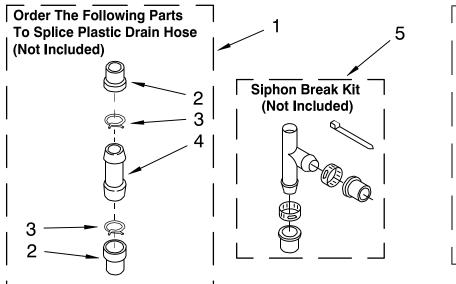

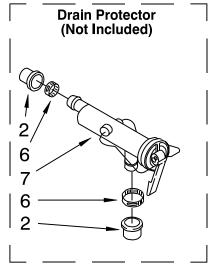


WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain
2	285321	Hose Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit
6 7	65349 367031	(Not Included) Clamp, Hose Drain Protector (Not Included)

#### **MISCELLANEOUS PARTS**

For Model: LSR5101LQ1 (Designer White)

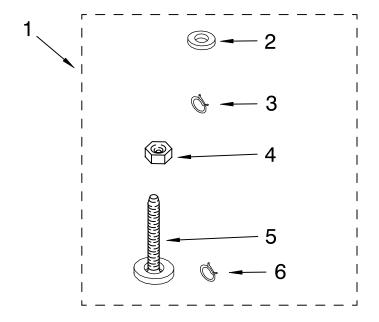

Illus. No.	Part No.	DESCRIPTION
1	3976263	Miscellaneous
2	3976300	Parts Bag Washer, Inlet Hose
3 4		(1–1/16 x 5/8) (4) Clamp, Hose Nut, Lock (2) (3/8–16)
5	389102	Foot, Front (2)
6	3366912	Clamp, Hose

### **OPTIONAL PARTS (NOT INCLUDED)**

Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION	Illus. Part   No. No. DESCRIPTION	
PAINT, TOUCH-UP (1/2oz.)	PAINT, BULK (1 qt.)	SEALER	
72017 White	799344 White (Uncut)	285195 Sealer, Gasket (.20 Fl. Oz.) (6 ml)	
PAINT, PRESSURIZED SPRAY (12 oz.)	<u>OIL</u>	ACCESSORY PARTS	
350938 Primer, Gray 350930 White	350572 Oil, Gearcase (16 Oz.)	367031 Drain Protector 285320 Siphon Break Kit	
	LUBRICANT		
	285208 Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)		